




# CITY OF PERRIS

## DEVELOPMENT SERVICES DEPARTMENT PLANNING DIVISION

135 NORTH D STREET, PERRIS, CA 92570-2200  
(951) 943-5003

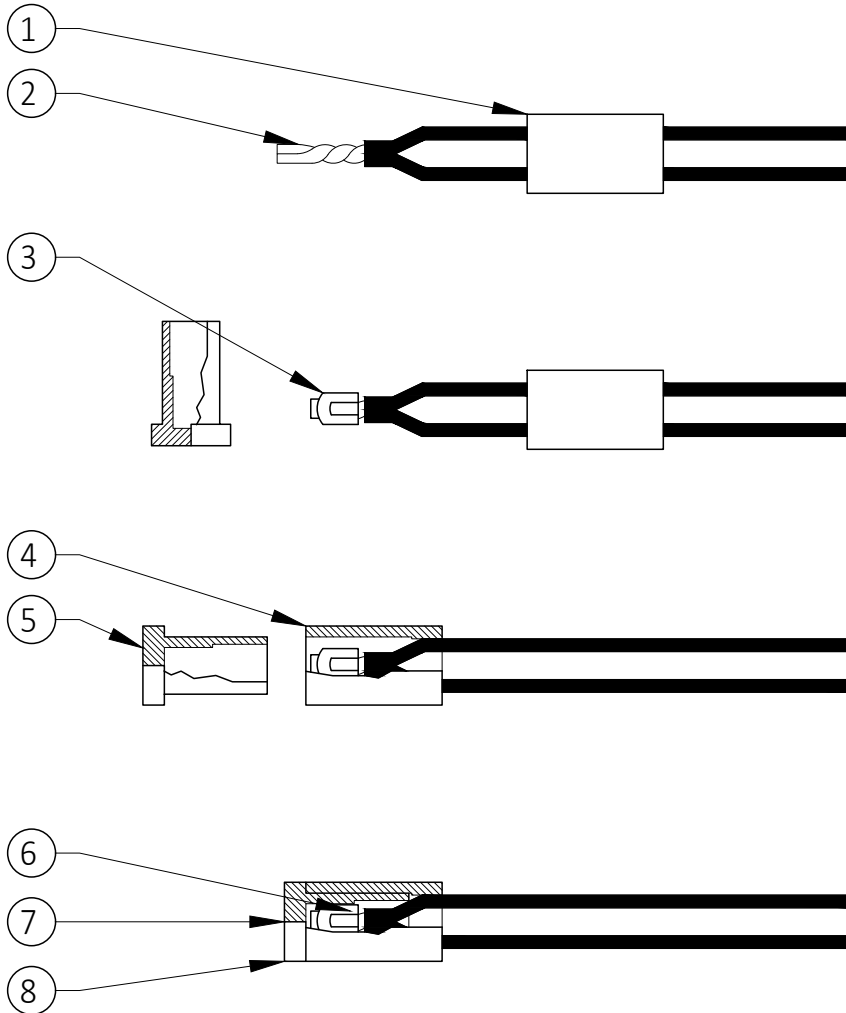

### LEGEND:

- ① SLIP BASE SOCKET OVER END OF WIRES
- ② STRIP WIRES APPROX. 5/8" FROM ENDS - TWIST TOGETHER WITH PLIERS
- ③ PUT CRIMP END OVER WIRE ENDS - CRIMP SLEEVE AND CUT OFF EXCESS WIRE
- ④ PULL BASE SOCKET OVER END OF WIRES AS FAR AS POSSIBLE
- ⑤ PUSH SEALING PLUG INTO BASE SOCKET
- ⑥ PUSH WIRES TO END OF BASE SOCKET TO INSURE COMPLETE SEALING OF CONNECTION
- ⑦ COMPLETED WATERPROOF WIRE CONNECTION
- ⑧ CONNECTIONS SHALL BE SPEARS DS-100 WIRE CONNECTOR OR APPROVED EQUAL

N.T.S.

## CONVENTIONAL COMMON/SIGNAL WIRE

I-12

DATE: 08/12/24